


UV System Parts Guide




Sentry Aqua Guard 120A and 240A

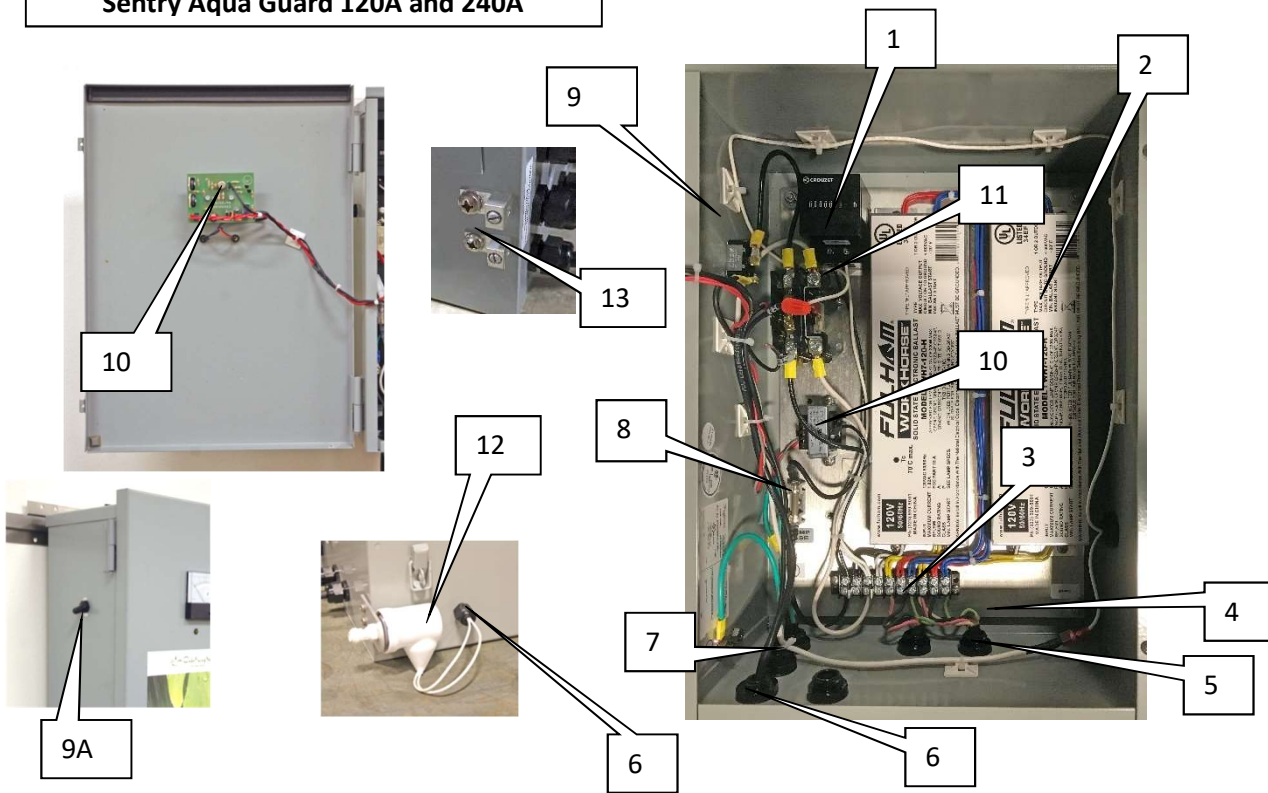



#	Description	Part Number	
	Power Supply	PS120A120	PS240A120
1	Meter hour	99761715	99761715
1A	Meter hour socket	26546803	26546803
2	Ballast - WH7-120-H	WH7-120-H (1 required)	WH7-120-H (2 required)
3	Terminal block 10 pos 18AWG		TB100-10SP (1 required)
3	Terminal block 5 pos 18AWG	TB100-05SP (1 required)	
4	Panel mount for 16X12 box	P1612	P1612
5	Liquid tight fitting ½ small	3231 (4 required)	3231 (5 required)
5A	Liquid Tight locknut ½	8463 (4 required)	8463 (5 required)
6	Liquid tight fitting 3/8	3228	3228
6A	Liquid Tight locknut 3/8	8461	8461
7	Power cord male 15A 12AWG4	123MSJTOW4 (2 req'd)	123MSJTOW4 (2 req'd)
8	Fuse holder glass 1-1/4 tabs	354801GY	354801GY
8A	Fuse glass time delay	GSA2	GSA4
9	Toggle switch on/off 115V	0090-0001	0090-0001
9A	Switch Boot	C1131/27	C1131/27
10	Monitor & control assembly w/LEDs (see pg. 5)	C-MCA/LED-120V	C-MCA/LED-120V
11	Contactor	C25CNB125A	C25CNB125A
12	Pressure Switch	800120-3	800120-3
12A	Pressure Switch Boot Cover	182010	182010
12B	Female Adaptor ¼" X 1/8"	PP450821W	PP450821W
13	Bonding Lug	ADR6 (2)	ADR6 (2)

Sentry Aqua Guard 480A and 720A

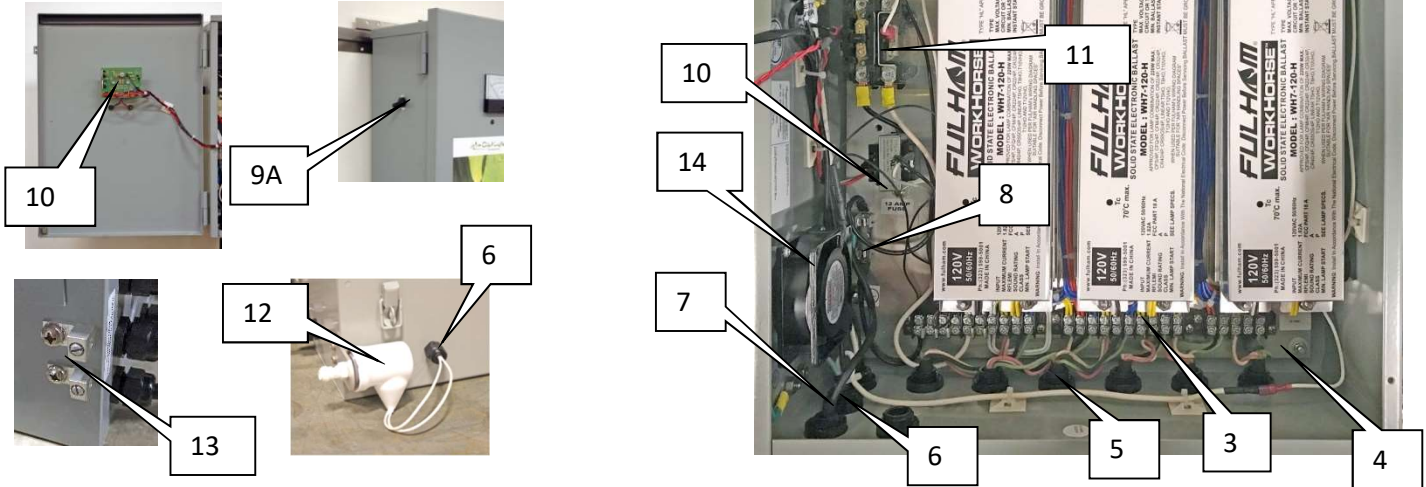


#	Description	Part Number	
	Power Supply	PS480A120	PS720A120
1	Meter hour	99761715	99761715
1A	Meter hour socket	26546803	26546803
2	Ballast - WH7-120-H	WH7-120-H (4 required)	WH7-120-H (6 required)
3	Terminal block 10 pos 18AWG	TB100-10SP (2 required)	TB100-10SP (2 required)
	Terminal block 5 pos 18AWG		TB100-05SP (1 required)
4	Panel mount for 16X16X6 box	P1616	P1616
5	Liquid tight fitting ½ small	3231 (7 required)	3231 (9 required)
5A	Liquid Tight locknut ½	8463 (7 required)	8463 (9 required)
6	Liquid tight fitting 3/8	3228	3228
6A	Liquid Tight locknut 3/8	8461	8461
7	Power cord male 15A 12AWG4	123MSJTOW4	123MSJTOW4
8	Fuse holder glass 1-1/4 tabs	354801GY	354801GY
8A	Fuse glass time delay	GSA8	GSA12
9	Toggle switch on/off 115V	0090-0001	0090-0001
9A	Switch Boot	C1131/27	C1131/27
10	Monitor & control assembly w/LEDs (see pg.5)	C-MCA/LED-120V	C-MCA/LED-120V
11	Contactor	C25CNB125A	C25CNB125A
12	Pressure Switch	800120-3	800120-3
12A	Pressure Switch Boot Cover	182010	182010
12B	Female Adaptor ¼" X 1/8"	PP450821W	PP450821W
13	Bonding Lug	ADR6 (2)	ADR6 (2)
14	Fan Tubeaxial AC 3.15" X 1"	UF80B12-BWHR	UF80B12-BWHR



Sentry Aqua Guard 960A and 1200A

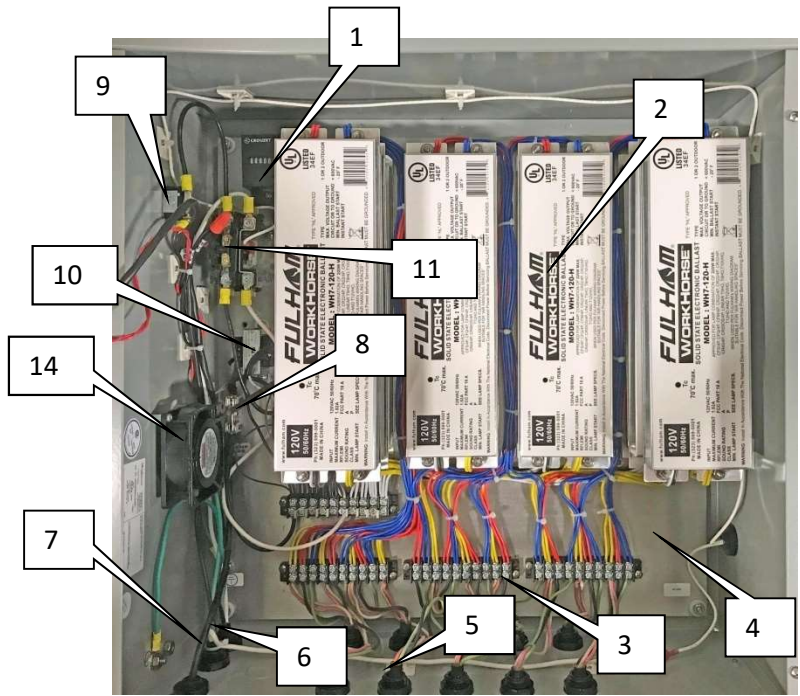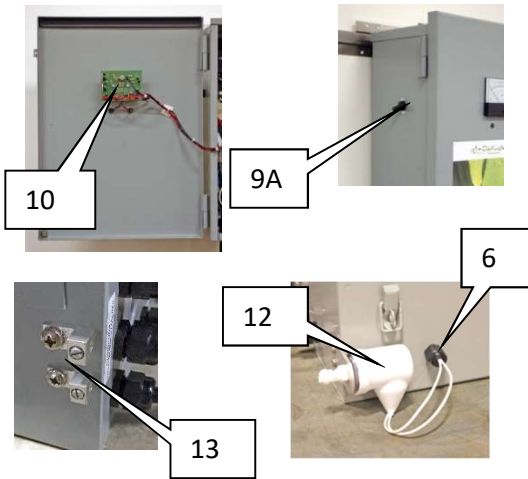

#	Description	Part Number	
	Power Supply	PS960A120	PS1200A120
1	Meter hour	99761715	99761715
1A	Meter hour socket	26546803	26546803
2	Ballast - WH7-120-H	WH7-120-H(8 required)	WH7-120-H(10 required)
3	Terminal block 10 pos 18AWG	TB100-10SP (4 required)	TB100-10SP (4 required)
4	Panel mount for 20X20X8 box	P2020	P2020
5	Liquid tight fitting ½ small	3231 (11 required)	3231 (13 required)
5A	Liquid Tight locknut ½	8463 (11 required)	8463 (13 required)
6	Liquid tight fitting 3/8	3228	3228
6A	Liquid Tight locknut 3/8	8461	8461
7	Power cord male 15A 12AWG4	123MSJTOW4	123MSJTOW4
8	Fuse holder glass 1-1/4 tabs	354801GY	354801GY
8A	Fuse glass time delay	GSA15	GSA15
9	Toggle switch on/off 115V	0090-0001	0090-0001
9A	Switch Boot	C1131/27	C1131/27
10	Monitor & control assembly w/LEDs (see pg. 5)	C-MCA/LED-120V	C-MCA/LED-120V
11	Contactor	C25CNB125A	C25CNB125A
12	Pressure Switch	800120-3	800120-3
12A	Pressure Switch Boot Cover	182010	182010
12B	Female Adaptor ¼" X 1/8"	PP450821W	PP450821W
13	Bonding Lug	ADR6 (2)	ADR6 (2)
14	Fan Tubeaxial AC 3.15" X 1"	UF80B12-BWHR	UF80B12-BWHR

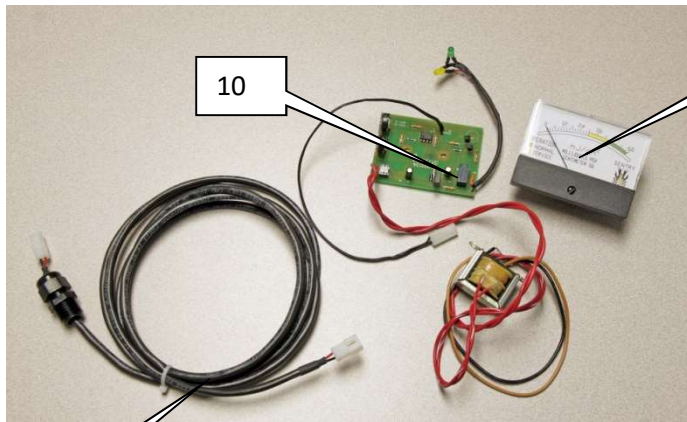

10
10A
15A
15-Monitor Head Kit - Stainless

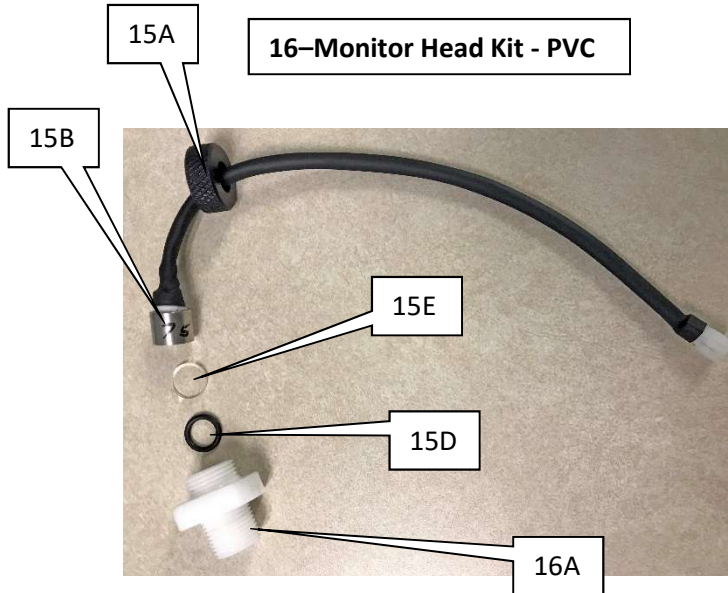
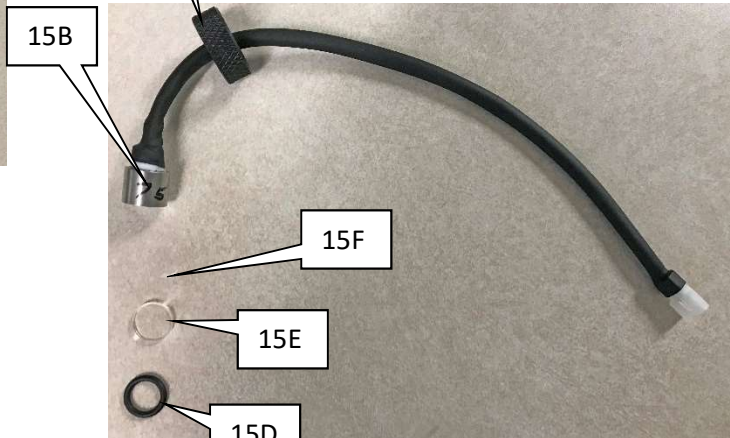


15A
16-Monitor Head Kit - PVC




16B-Kit Threaded Sensor Boss - PVC



#	Description	Part Number
10A	Meter with Sentry	C-M/%
15	Monitor Head/ Sensor kit (Stainless System)	KITUVS
15A	Monitor cap	C-BMC
15B	Monitor head/Sensor	C-MH
15C	Monitor head extension 10'	C-MHJ/10A
15D	Monitor "O" ring	C-MO
15E	Monitor Quartz window	C-W
15F	Teflon window thin shade	C-W/T
16	Monitor Head Kit (PVC System)	KITUVPVC
16A	Sensor Boss for PVC Chamber	C-TB
16B	Kit Threaded Sensor Boss for PVC Chamber	KITTSBPVC

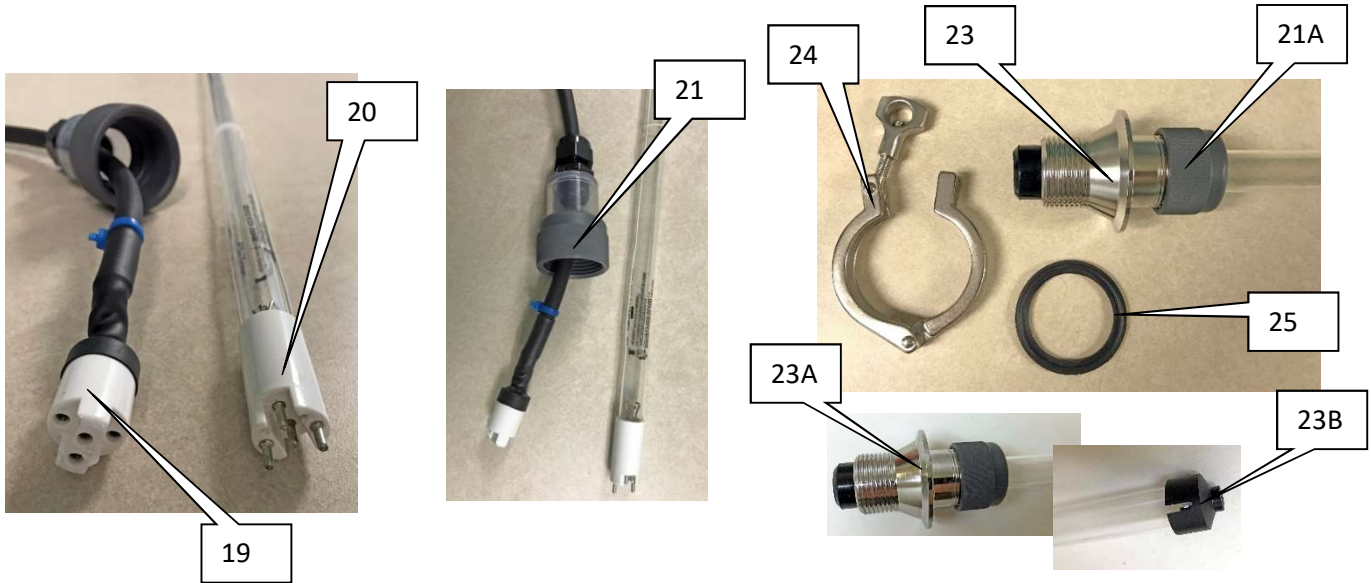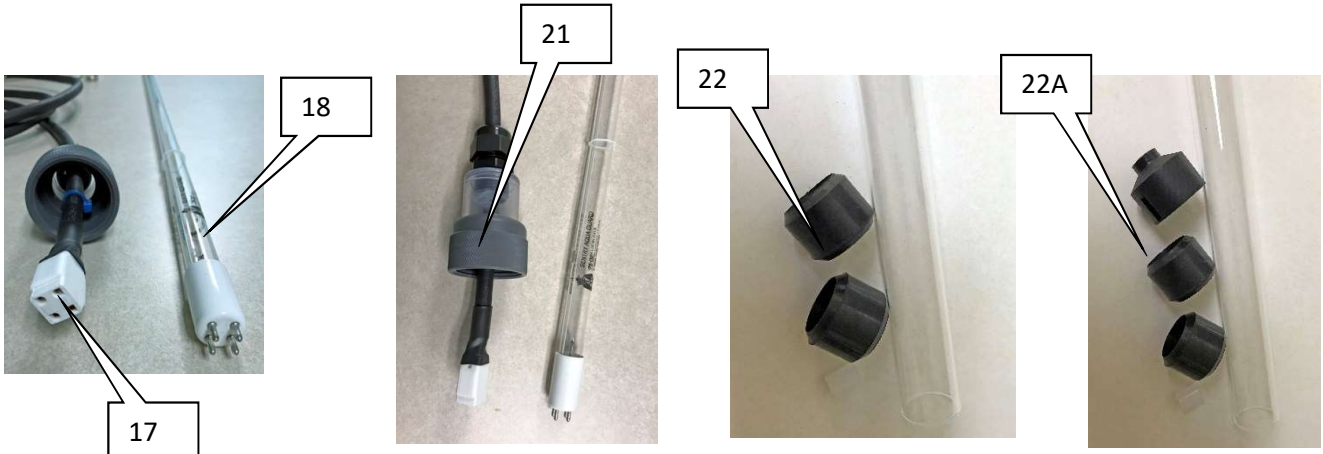

#	Description	Part Number
17	Power Supply Lead Wire 8.25 4 Pin Large	KITPSLW8.25LG (Used through 7/31/2014)
18	Lamp 120W 185 Amalgam	LA120W185 (Used through 7/31/2014)
19	Power Supply Lead Wire 8.25 Large Sentry Pin	KITPSLW8.25LGSP (Used from 8/1/2014)
20	Lamp 120W 185 Amalgam Sentry Pin	LA120W185SP (Used from 8/1/2014)
21	Cap Viewing 1" Compression	CAPVCOMP1LG
21A	Quick Disconnect Cap Compression 1" PVC	QDCAP1PVC
22	Kit Quartz Sleeve Standard W/ Gaskets	KITQSSTD
22A	Kit Quartz Sleeve Standard W/ Gaskets & Spring Guide	KITQSSTDSG
23	Quick Disconnect Quartz Sleeve Standard Assy.	QDCQSSTDA
23A	Quick Disconnect Quartz Sleeve Standard Assy. W/ Spring Guide	QDCQSSTDASG
23B	Cap Spring Guide	CAPQSPSG
24	Quick Disconnect Clamp 2"	QDCL2
25	Quick Disconnect Gasket 2"	QDGK2

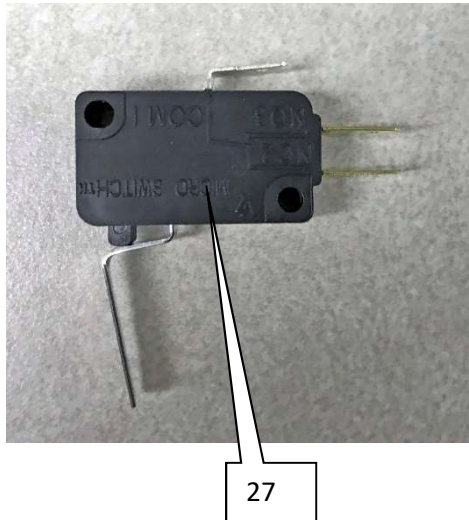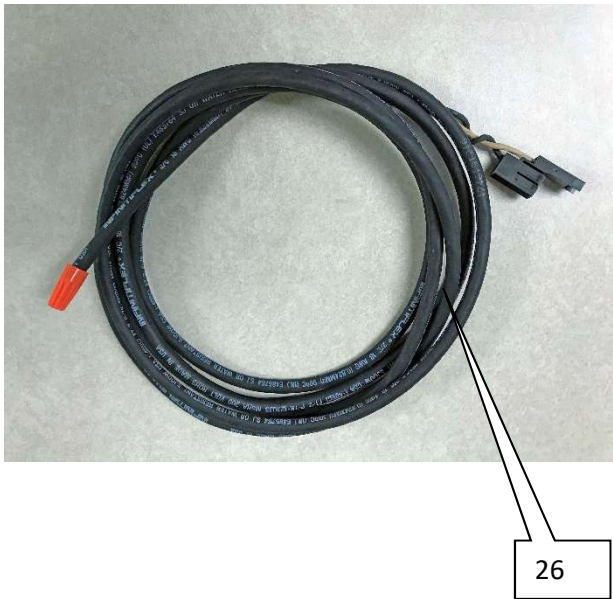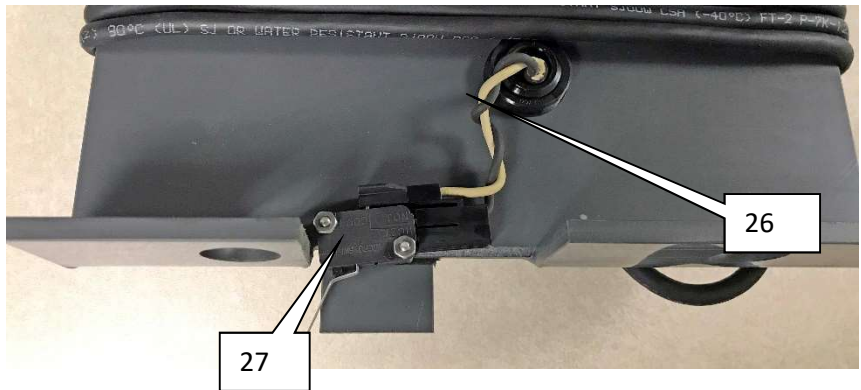

#	Description	Part Number
26	Safety Cover Lead Wire with Switch Connector	KITSCLW10
27	Micro Switch for Safety Cover	V7-1B1908-022